



# MyOS 2022 USER GUIDE

# SCARAB

TABLE OF CONTENTS

12" Center Display ..... pg. 2

Depth Screen .....pg. 3

Ballast Screen .....pg. 3

Gauges Screen ..... pg. 3

Media Screen .....pg. 4

Reverse/Docking Cam .....pg. 4

Media Player..... pg. 4

Cruise Control .....pg. 5

Cruise Modes .....pg. 5

Call Alerts .....pg. 6

7" Controls Display ..... pg. 6

Controls Screen ..... pg. 7

Stereo Screen .....pg. 9

Sirius SXM® Radio .....pg. 12

RGB Lighting Controls..... pg. 12

Android Apps .....pg. 12

Settings Menu .....pg. 12

12" CENTER DISPLAY



- |                           |                                |
|---------------------------|--------------------------------|
| 1- Ballast Screen         | 7- Cruise Control On/Off       |
| 2- Gauges Screen          | 8- Cruise Mode Menu            |
| 3- Depth Screen           | 9- Neutral Offset Up/Down      |
| 4- Media Screen           | 10- Gear/Neutral Offset On/Off |
| 5- Cruise Control Up/Down |                                |
| 6- Night Mode             |                                |

NIGHT MODE



The **NIGHT MODE** button toggles the backlighting between the DAYTIME and NIGHTTIME set points that can be found in the SETTINGS MENU. NIGHT MODE not only controls the brightness of the screens, but also the lighting of the various buttons found on the DASH.

## DEPTH SCREEN



Touch the **DEPTH** button at the top of the screen to view the current water depth. This page will also show the Driver the last 20 seconds of Depth history.

## BALLAST SCREEN



Touch the **BALLAST** Button at the top of the screen to view the ballast controls. Select between the starboard, port, and forward ballasts. Once one or more ballasts are selected, their indicator will highlight **BLUE**.

With the desired ballasts selected, the user may touch **FILL/DRAIN**, or the percentages 0-100% to set the ballasts at the desired level.

**STOP** will stop any FILL/DRAIN systems that are running.

## GAUGES SCREEN



Touch the **GAUGES** Button at the top of the screen to view the COOLANT TEMP, BATTERY VOLTAGE, ENGINE HOURS, and FUEL PERCENTAGE of the boat.

Depending on your engine configuration(single or twin), this screen will display data for one or both of your engines.

# MEDIA SCREEN



 
- 1- Reverse Camera
- 2- Docking Camera
- 3- Video Player
- 4- PDF Viewer
- 5- File Transfer

With the [BACKUP CAMERA OPTION](#) and/or [DOCKING CAMERA](#) options turned ON in the [SETTINGS](#) menu the buttons for the CAMERA FEEDS will be selectable.

## REVERSE/DOCKING



## PDF/VIDEO VIEWER

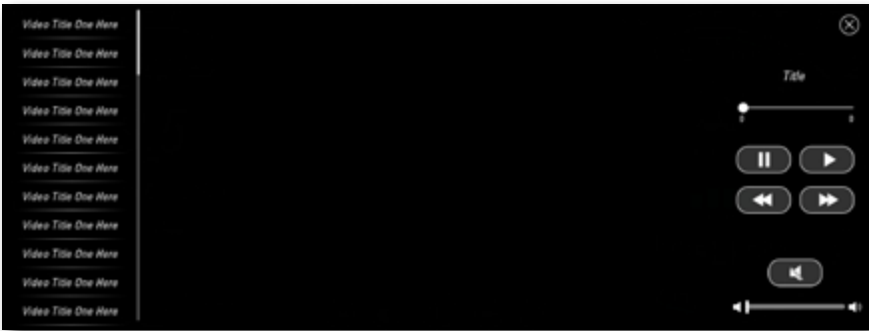

The [PDF](#) and [VIDEO](#) buttons will allow the Driver to view PDFs and play VIDEOS that have been stored on the system, or are on a USB stick that is inserted into the DASH USB PORT. These buttons will only be selectable when the ENGINE is [OFF](#), or if the ENGINE is in [IDLE](#).

The VIPER III System supports the following media formats for video playback: .divx / .dv / .flv / .h263 / .h264 / intel-h263 / .jpeg / .mpeg / .msmpeg / .msvideocodec / .wmv / .xvid / .gif / .jpeg / .png / .tiff

Playback screen resolution is 1280 x 720px. Video's recorded at higher resolution will be down-sampled before display. This down-sampling requires CPU time and may be reflected in the quality of the video playback

## FILE TRANSFER



Move files from USB INPUT DEVICES to the System. Highlight the file to be copied, then select [COPY](#). Please allow a sufficient amount of time for the file to transfer.

The VIPER III System supports the following media formats for file transfer: 1- mp3/ .mp4 / .avi / .flv / .jpeg / .mov / .png /.wmv /.pdf

 
## CRUISE CONTROL



Maintain a consistent speed with the Speed Control feature. To dial in the speed for the your favorite water activity, follow the steps below.

- 1- With the ENGINE RUNNING and in NEUTRAL, turn SPEED CONTROL On by touching **CRUISE CONTROL** button (pictured above in the left image). The button will turn **BLUE**, and the controls for the SPEED CONTROL will appear above the VESSEL SPEED.
- 2- There are various ways to set the Desired Speed. The user can use the Up and Down arrows on either side of the Set Speed. This will move the Set Speed Up or Down by 0.1 MPH. If the Up or Down button is held, the speed will begin to increase or decrease by 1.0 MPH. To move to your desired speed even quicker, the User can press the Set Speed to bring up the Quick Entry Keypad (pictured in the image above on the right). This allows the User to enter in the desired speed without having to hold a button for an extend period of time.
- 3- When ready to start moving, move the throttle to the forward position until the cruise engages.
- 4- Moving the Throttle back to the Neutral position will disengage the Speed Control.
- 5- To turn the Speed Control off, simply press the Cruise Control button. The button will turn to black, and the controls for Cruise Control will disappear.

## CRUISE MODES

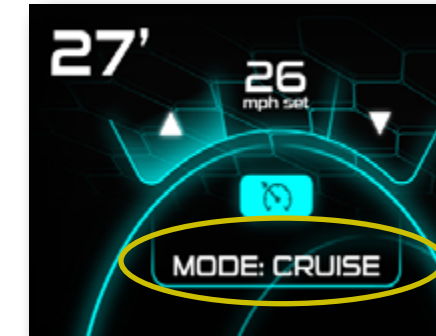

To access the BRP CRUISE MODES MENU, tap the **MODE** button under the CRUISE CONTROL ON/OFF Button.



Within the CRUISE MODES MENU, the user can adjust the CRUISE SET SPEED with the **UP/DOWN** buttons. The user will also have the option to choose between the 4 BRP CRUISE MODES.

### SKI MODE

Touch **SKI** Mode button to control vessel speed and acceleration profiles. Pressing and holding a preset button will save the profile and set speed for easier configuration in the future. A short press of a preset will change the ski mode settings

### ECO MODE

Touch **ECO** Mode button to optimize fuel efficiency while limiting engine torque.

### DOCK MODE

Touch **DOCK** Mode button to limit engine power to increased maneuverability while docking.

### CRUISE MODE

Touch **CRUISE** Mode button to hold the vessel at a desired speed. Moving the throttle to the NEUTRAL position will bring the engine to idle.



CALL ALERTS



A pop-up alert signals a new incoming text message or phone call.

CONTROLS SCREEN



- 1- Nav Lights On/Off
- 2- Anchor Lights On/Off
- 3- Horn
- 4- Bilge Pump
- 5- Docking Lights On/Off
- 6- Blower
- 7- Acc 1
- 8- Acc 2
- 9- RGB Controls
- 10- All Off

10" CONTROLS DISPLAY



 
- 1- Stereo Screen
- 2- Controls Screen
- 3- Android Apps Screen
- 4- Stereo Power On/Off
- 5- Volume Level
- 6- Mute Sound
- 7- Settings Menu

Touch the **BILGE** button to turn the FORWARD BILGE PUMP **ON/OFF**. If an AUTO-BILGE ALERT occurs, the DRIVER will be able to navigate to the **CONTROLS** Page to see which Bilge pump is running.

Touch **BLOWER** to toggle the BLOWER **ON** and **OFF**. When the boat is initially powered **ON**, the BLOWER will START and will run for 4 minutes.

Touch **ALL OFF** to turn **OFF** any devices that are running on the **CONTROLS** page.

STEREO SCREEN

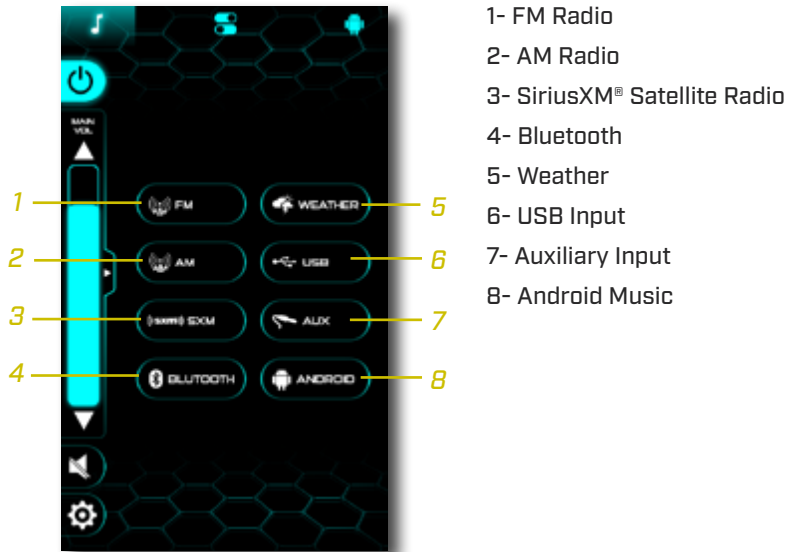

AM/FM / WEATHER



The PAGE LIST saves your favorite stations from AM, FM, or WEATHER. Up to 15 stations are able to be saved.

To save a station, select or tune to the stations channel, then PRESS AND HOLD on the desired location in the preset list. This will copy and paste the currently active station. Storing it for later recall.

 
SOUND ADJUSTMENT



From the EQUALIZER page, the DRIVER is able to adjust the TREBLE, BASS, SUBWOOFER and BALANCE. It is recommended to leave the TREBLE and BASS centered at 0.

The MIXER page allows the DRIVER the ability to change the volume level for the COCKPIT, EXTERIOR, and SUB, or the MASTER VOLUME which controls all. AUTO-VOLUME level is also adjusted from this page.

BLUETOOTH

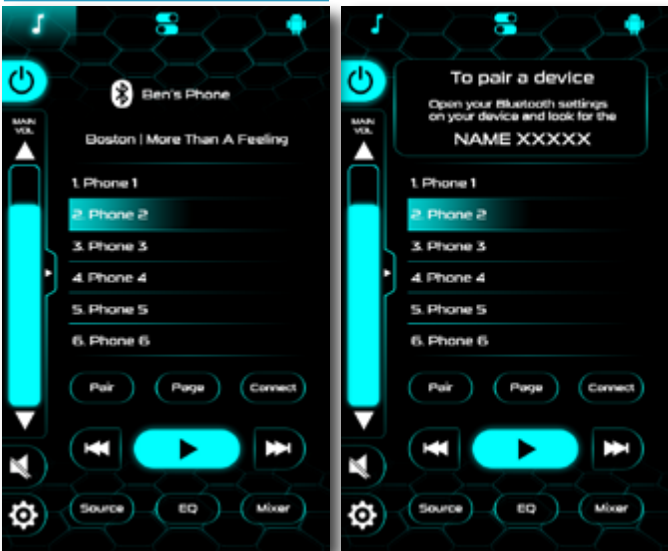

Touch **BLUETOOTH** to play songs on your phone or favorite mobile device with Bluetooth technology.

From the **BLUETOOTH** Page, the user is able to select from a list of paired devices. If the desired device has been paired and is within range, the user can connect to the device from the 7”.

The user is able to initiate the pairing process from the **BLUETOOTH** page by selecting **PAIR**. A pop-up will appear with the **BLUETOOTH** name for the vessel. Once a device is successfully **PAIRED**, this pop up will disappear.

**PLAY/PAUSE**, **SEEK FORWARD**, and **SEEK BACK** allow the user to control the **BLUETOOTH** device.

USB INPUT



Touch **USB** to access a device plugged into the DASH USB PORT. **USB INPUT DEVICES** with music stored on them are able to be accessed from this screen.

If a **USB INPUT DEVICE** is plugged in that has music stored on it, the **AUDIO SOURCE** will automatically switch to **USB**.

 
The System supports the following media formats for audio playback

.ac3 (dolby digital) / .hdcd / .lpcm / .mpeg / .mpeg 2.5 / .pcm / .wmv

AUXILIARY INPUT

Touch **AUX** to access the **AUXILIARY INPUT PORT** that is located in the **GLOVEBOX**.

ANDROID MUSIC

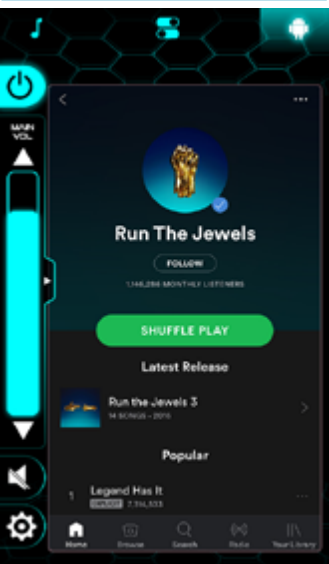


Touch **ANDROID** to play music from the **EMBEDDED ANDROID APPLICATION**, where the user can download various Apps from the **AMAZON APP STORE**.

Download your favorite Music App and save your playlists to listen to anytime.



 SIRIUSXM RADIO

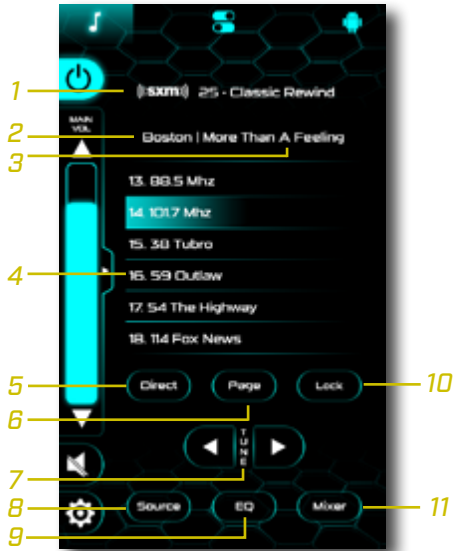

- 1- Channel Number/Name
- 2- Artist
- 3- Song Title
- 4- Favorites
- 5- Direct Channel Tuning
- 6- Page
- 7- Channel Tuner
- 8- Source Select
- 9- Equalizer
- 10- Parental Lock
- 11- Audio Mixer

Select **SiriusXM** to listen to SiriusXM Satellite Radio. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. A SiriusXM Connect Vehicle Tuner, Antenna and Subscription are required and may be sold separately.

For more information, visit [WWW.SIRIUSXM.COM](http://WWW.SIRIUSXM.COM)



SiriusXM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.

ACTIVATION



After installing your SiriusXM Connect Tuner and Antenna, power on your Command Center system and select **SiriusXM MODE**. You should be able to hear the SiriusXM preview channel on Channel 1. If you cannot hear the preview channel, please check the installation instructions to make sure your SiriusXM Connect Tuner is properly installed.

After you can hear the preview channel, tune to **CHANNEL 0** to find the Radio ID of your tuner. In addition, the Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner and its packaging. You will need this number to activate your subscription. Write the number down for reference.

Note: the SiriusXM Radio ID does not include the letters I, O, S or F.

In the USA, you can activate online or by calling SiriusXM Listener care:  
Visit [WWW.SIRIUSXM.COM/ACTIVATENOW](http://WWW.SIRIUSXM.COM/ACTIVATENOW)  
Call SiriusXM Listener Care at **1-866-635-2349**

For Canadian Subscriptions, please contact:  
Visit [WWW.SIRIUSXM.CA/ACTIVATE](http://WWW.SIRIUSXM.CA/ACTIVATE)  
Call XM customer Care at **1-888-539-7474**

As part of the activation process, the SiriusXM satellites will send an activation message to your tuner. When your radio detects that the tuner has received the activation message, your radio will display: **"Subscription Updated"**

Once subscribed, you can tune to channels in your subscription plan. Note, the activation process usually takes 10 to 15 minutes, but may take up to an hour. Your radio will need to be powered on and receiving the SiriusXM signal to receive the activation message.

OPERATION



**DIRECT CHANNEL TUNNING**  
Touch **DIRECT** to enter a channel number directly. Enter the channel number on the KEYPAD and press **ENTER** to input.

**INCREMENTAL TUNING**  
Touch the **LEFT** and **RIGHT** tuning buttons to incrementally adjust the radio station frequency.

**CATEGORY BROWSING**  
Touch **CATEGORY** to browse categorized stations. Use the up and down arrows to navigate, and the **SELECT** button to choose station. The Category Browsing screen will time out after 5 seconds if no selection is made.

 
**STORING AND EDITING PRESET CHANNELS**  
To store a channel to the Preset List, first navigate to the desired channel by using the Tuner, Direct Channel, or Category Browser. With the channel selected, touch the **PAGE** button to bring up the Preset List. Press and Hold on an empty slot to save a new preset. Press and Hold an existing preset to overwrite it with the current selection.

**RECALLING PRESET CHANNELS**  
To recall a previously saved preset channel, first touch the **PAGE** button to bring up the Preset List. Touch the desired saved station in the Preset List to choose it. The Preset List will time out after 5 seconds if no selection is made.

**RESET TO DEFAULTS**  
The SiriusXM Satellite Radio can be reset back to it's original factory settings with the **SIRIUS RESET** button, located in the **RADIO CONFIGURATION** menu in Configuration Settings.

To navigate to the reset button, touch the **SETTINGS ICON** on the 7" Display to enter **SYSTEM SETTINGS**. Then touch **CONFIGURATION** to enter the CONFIGURATION MENU. Next touch **RADIO CONFIGURATION** to enter the RADIO CONFIGURATION MENU, where the **SIRIUS RESET** button is located.

PARENTAL CONTROL

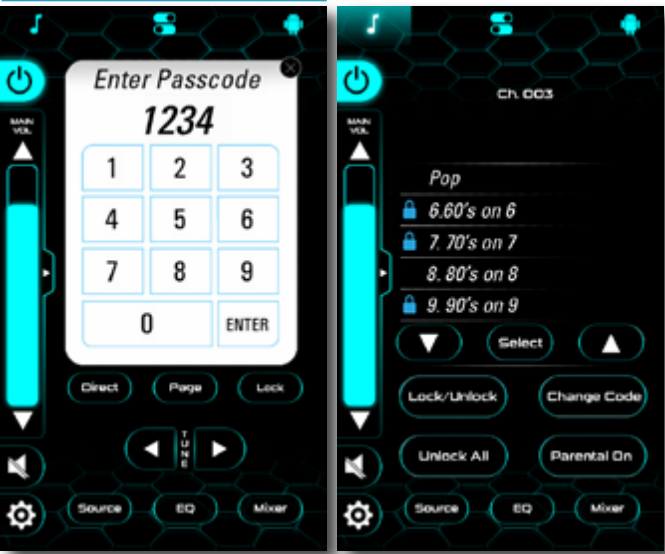

Limit the access to any SiriusXM Satellite Radio channel, including those with mature content. When enabled, the PARENTAL CONTROL feature requires a PASSCODE to tune to **LOCKED** channels. **LOCKED** channel information is not displayed without first entering a PASSCODE.

To open the PARENTAL CONTROL settings, press the **PARENTAL** button on the SiriusXM page. A PASSCODE is required to enter the screen. The DEFAULT PASSCODE is 0000.

**LOCK A CHANNEL**  
To lock a channel, open the PARENTAL CONTROL settings, select the desired channel, and press **LOCK**. The **LOCK ICON** will appear next to locked channels. Once locked, the channel number must be entered directly.

**UNLOCK A CHANNEL**  
To unlock a channel, open the PARENTAL CONTROL settings, select the desired channel, and press **UNLOCK**.

A locked channel can be accessed with the PASSCODE. Touch **DIRECT** to enter a channel number directly. Enter the channel number on the KEYPAD and press **ENTER** to input. Enter the PASSCODE on the KEYPAD to unlock the channel. The channel will remain locked upon the next start up of the radio unless disabled in the PARENTAL CONTROL settings.

**CHANGE CODE**  
To change the current PASSCODE, press **CHANGE CODE** in the PARENTAL CONTROL settings, and enter the new PASSCODE.

**PARENTAL CONTROL ON/OFF**

Touch [PARENTAL ON/OFF](#) in the PARENTAL CONTROL settings to toggle the PARENTAL CONTROL feature ON or OFF. This feature is set to OFF by default.

**TROUBLESHOOTING** ▾



**CHECK TUNER**

The radio is having difficulty communicating with the SiriusXM Connect Vehicle Tuner. The tuner may be disconnected or damaged. Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio.

**CHECK ANTENNA**

The radio has detected a fault with the SiriusXM Antenna. The antenna cable may be either disconnected or damaged.

Verify that the antenna cable is connected to the SiriusXM Connect Vehicle Tuner.

Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged. SiriusXM products are available at your local car audio retailer or online at [www.shop.siriusxm.com](http://www.shop.siriusxm.com).

**NO SIGNAL**

The SiriusXM connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal.

Verify that your vehicle is outdoors with a clear view of the sky.

Verify that the SiriusXM magnetic mount antenna is mounted on a metal surface on the outside of the vehicle.

Move the SiriusXM antenna away from any obstructions.

Inspect the antenna cable for damage and kinks.

Consult the SiriusXM Connect Vehicle tuner installation manual for more information on antenna installation. Replace the antenna if the cable is damaged. SiriusXM products are available at your local car audio retailer or online at [www.shop.siriusxm.com](http://www.shop.siriusxm.com).

**SUBSCRIPTION UPDATED**

The radio has detected a change in your SiriusXM subscription status. Confirm to clear the message.

In the U.S.A., visit [www.siriusxm.com](http://www.siriusxm.com) or call [1-866-635-2349](tel:1-866-635-2349) if you have questions about your subscription.

In Canada, visit [www.siriusxm.ca](http://www.siriusxm.ca) or call [1-888-539-7474](tel:1-888-539-7474) if you have questions about your subscription.

**CHANNEL UNAVAILABLE**

The channel that you have requested is not a valid SiriusXM channel or the channel that your were listening to is no longer available. You may also see this message briefly when first connecting a new SiriusXM Connect Vehicle tuner.

In the U.S.A., visit [WWW.SIRIUSXM.COM](http://www.siriusxm.com) or in Canada visit [WWW.SIRIUSXM.CA](http://www.siriusxm.ca) for more information about the SiriusXM channel lineup.

**CHANNEL LOCKED**

The channel that you have requested is Locked by the radio Parental Control feature. See previous PARENTAL CONTROL LOCK, page 24 for more information on the PARENTAL CONTROL feature and how to access locked channels.

**INVALID CODE**

The code entered to unlock the selected channel is invalid. See previous PARENTAL CONTROL LOCK, page 24 for more information on the PARENTAL CONTROL feature and how to access locked channels.

See previous RESET TO DEFAULTS, page 24 for more information on how to reset The SiriusXM Satellite Radio back to it's original factory settings.

## RGB LIGHTING



- 1- Lighting Zone Toggle
- 2- Light Color
- 3- Color Saturation Slider
- 4- Light Brightness Slider
- 5- Color Scenes
- 6- Music Sync
- 7- Theme Speed Slider
- 8- Exit to Controls Menu
- 9- Power Lights On/Off

### BACKLIGHTING ZONES

The zone backlighting buttons, [INTERIOR](#) / [EXTERIOR](#) / [UNDERWATER](#), allow each button to match the selected color and mode of that zone.

### COLOR SCENES

Color scenes are preselected groupings of colors that cycle through. Touch [SOLID](#) for a solid color light. Touch [ROTATE](#) for a rotating color effect. Touch [PULSE](#) for a single color strobing effect.

### MUSIC SYNC

Touch the [MUSIC SYNC](#) button to have the lighting effects react to the music playing through the MyOS displays stereo system.

### SPEED SLIDER

 
[SPEED](#) adjusts the timing of the color changeover within the COLOR SCENES.

## ANDROID APPS

The embedded ANDROID application allows the Driver or User the ability to download their favorite Apps to their boat using WiFi or a Cellular Hotspot. Using the Amazon App store, the user can search for their favorite Music, Weather, or Navigation app.

To stream music or get the latest weather reports, the system will need to be connected to an active Internet source.

## SETTINGS MENU

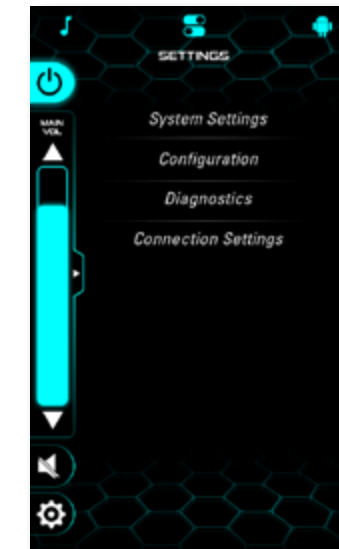

Touch the [SETTINGS ICON](#) on the 7" Display to navigate to the [SYSTEM SETTINGS](#) where the user can manage [SOFTWARE UPDATES](#), [OPTIONS](#), and [TROUBLESHOOTING](#).

SYSTEM SETTINGS ▾



SOFTWARE

Touch SOFTWARE to view the installed software revisions and update the system via USB Input Device or Over The Air updates.

For USB Input Device Updates, verify that the software update is the only file that is on the USB Input Device. Insert the USB device into the USB Port that is found on the Dash. Once the file is finished copying to the system, a **INSTALL** button will appear. Remove the USB device, and press the **INSTALL** button. The system will reboot to a status bar and animation on the 12 inch screen. This status bar shows the user the progress of the software update. Once the software update is complete, the system will reboot into the application.

For Over The Air Updates, the system must be connected to an active WiFi connection. The user will select the WIFI button, which will start the process of verifying the System Software Version against the latest Software Version that is available.

If an update is available, the Software screen will display a message with the new Software Version and the download size. Pressing the install button begins the download process. The dialog box will show the user the download percentage complete. Once the download is complete, the **INSTALL** button will highlight appear. Pressing the **INSTALL** button will cause the system to reboot and show a status bar. The system will reboot to a status bar and animation on the 12 inch screen. This status bar shows the user the progress of the software update. Once the software update is complete, the system will reboot into the application.

BACKLIGHTING ▾



Touch **BACKLIGHTING** screen the driver to adjust the brightness of

12", 7", and Dash LEDs from

There are two modes for the

Backlighting; Automatic and

In AUTOMATIC MODE, the system utilizes a Light Sensor to determine the time of Day and adjusts the brightness as follows,  
DAY - 100%  
DAWN/DUSK - 60%  
NIGHT - 5%

LANGUAGE

 
The **LANGUAGE** screen allows the user to switch between 4 languages; **ENGLISH**, **FRENCH**, **SPANISH**, and **GERMAN**. If a **FACTORY RESET** is initiated, the language will revert to **ENGLISH**.

APPEARANCE

The **APPEARANCE** screen allows the user to customize the look and feel of the display. There are 5 skins to choose from. These skins will change the color of the trim rings on the 12" and 7", and also the pointers on the 12".



CONFIGURATION

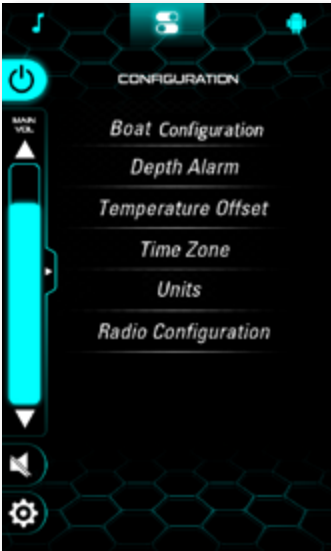

BOAT CONFIGURATION

Touch [OUTPUTS](#) to ENABLE/DISABLE on-screen touch control buttons for optional equipment. When enabled, the buttons will appear on the screen.

DEPTH ALARM

Touch [DEPTH ALARM](#) to adjust the SHALLOW DEPTH ALARM setting.

TEMPERATURE OFFSET

Touch [TEMP OFFSET](#) to adjust the displayed air and water temperatures to match an actual temperature readings.

TIME ZONE

Choose from all Time Zones, and turn ON/OFF Daylight Savings Time.

UNITS

Touch [UNITS](#) to choose from ENGLISH to METRIC units.

RADIO CONFIGURATION

Touch [RADIO](#) to set the Radio Region.

DIAGNOSTICS



SYSTEM DIAGNOSTICS

Touch [SYSTEM DIAGNOSTICS](#) to view on-screen SYSTEM DIAGNOSTIC information concerning boat sensors and GPS signal.

ENGINE ALARMS

Touch [ENGINE ALARMS](#) to view any ACTIVE or INACTIVE [ENGINE ALARMS](#).

GPS STATUS

Touch [GPS STATUS](#) to view GPS satellite information on the Android diagnostic app.

CONNECTION



BLUETOOTH CONNECTION

Touch [BLUETOOTH CONNECTION](#) to ENABLE/DISABLE the BLUETOOTH functionality. The user is also able to change the BLUETOOTH NAME of the device. A list of all the paired devices can be found on this screen. Using this list, the user is able to delete a device and favorite a device.

WIFI CONNECTION

Touch [WIFI CONNECTION](#) to see available Wifi Networks that are within range of the vessel.